

Index

A

- AC power
 - cord requirements, 0-1
- Armada 7000 Hard Drive
 - MultiBay Adapter
 - illustrated, 3-10
 - option part number, 3-11
 - spare part number, 3-11
- Armada 7800 *Illustrated Parts Map*
 - spare part number, 3-13
- Armada 7800 *Maintenance & Service Guide*
 - spare part number, 3-13
- ArmadaStation and Armada MiniStation *Illustrated Parts Map*
 - spare part number, 3-13
- ArmadaStation and Armada MiniStation *Maintenance & Service Guide*
 - spare part number, 3-13
- audio
 - assembly bracket
 - illustrated, 3-2, 3-6
 - removal, 5-42
 - only board
 - illustrated, 3-2
 - removing, 5-41
 - spare part number, 3-4
 - test error codes, 2-16
 - troubleshooting, 2-21
- audio/USB board
 - illustrated, 3-2
 - insulator, 5-40
 - removing, 5-39
 - spare part number, 3-3
- automobile adapter, 1-10
- automobile/aircraft adapter
 - cable
 - spare part number, 3-7
 - illustrated, 3-7, 3-10
 - option part number, 3-11
 - spare part number, 3-7, 3-11

- auxiliary battery
 - cable
 - connecting, 5-16
 - disconnecting, 5-8
 - illustrated, 3-2, 3-7, 3-8
 - installation, 5-12
 - removing, 5-33
 - retainer
 - illustrated, 3-2, 3-5
 - spare part number, 3-3, 3-7, 3-9

B

- base assembly
 - illustrated, 3-2
 - spare part number, 3-4
- battery
 - 3-volt Lithium disc cell
 - spare part number, 3-4
- bay
 - illustrated, 1-12
- charger, 1-10
 - illustrated, 3-7, 3-10
- equipment options, 1-10
- lithium disc cell
 - replacing, 5-1
- pack
 - illustrated, 3-2, 3-8, 3-10
 - specifications, 6-8
 - troubleshooting, 2-23
- power light
 - illustrated, 1-17
- release latch
 - illustrated, 1-18
- Battery Charger, 1-10
 - option part number, 3-11
 - spare part number, 3-7, 3-11
- beep codes, 2-6
- boot sequencing, 2-18

C

- cables
 - handling, 4-2
- caps lock light
 - illustrated, 1-17

- CD-ROM
 - drive
 - 20-speed Max
 - illustrated, 3-8, 3-10
 - spare part number, 3-9, 3-11, 3-12
 - 20X Max
 - specifications, 6-5
 - test error codes, 2-16
 - troubleshooting, 2-24
- CD-ROM drive, 1-11
 - specifications, 6-6
- cellular phone cable
 - illustrated, 3-10
 - option part number, 3-11
 - spare part number, 3-11
- checkup
 - computer, 2-10
- Compaq
 - diagnostics, 2-18
 - utilities, 2-6
- computer
 - checkup, 2-10
 - components
 - bottom, 1-18
 - display, 1-12
 - front side, 1-12
 - illustrated, 3-2
 - keyboard, 1-16, 1-17
 - left side, 1-12
 - rear panel, 1-14
 - right side, 1-13
 - spare part numbers, 3-3
 - disassembly sequence chart, 5-2
 - disconnecting, 5-5
 - documentation
 - spare part numbers, 3-13
 - features, 1-1, 1-4
 - feet, 5-7
 - logo, 5-6
 - models, 1-2

- options, 1-8
 - illustrated, 3-10
 - option part numbers, 3-11
 - spare part numbers, 3-11
- preparing for disassembly, 5-3
- serial number, 5-1
- setup, 2-7
- computer checkup (TEST), 2-10
 - error codes, 2-11
- computer setup, 2-9
- connector
 - pin assignments, 0-1
- connectors
 - handling, 4-2
- cursor-control keys
 - illustrated, 1-16

D

- design overview, 1-19
- diagnostics
 - Compaq, 2-18
- disassembly sequence chart, 5-2
- disconnecting computer, 5-5
- diskette drive, 1-11
 - error codes, 2-13
 - illustrated, 3-8, 3-12
 - spare part number, 3-9, 3-12
 - specifications, 6-4
 - troubleshooting, 2-25
- display
 - assembly, 5-5
 - installing, 5-12
 - removing, 5-5
 - bezel
 - removing, 5-17
 - illustrated, 3-2
 - panel
 - removing, 5-20
 - release latch
 - illustrated, 1-12

- spare part number, 3-3
- specifications, 6-2, 6-4
- switch
 - illustrated, 1-16
- troubleshooting, 2-34
- video cable
 - removing, 5-29
- docking
 - connector
 - illustrated, 1-15
 - pinout, 0-3
 - restraint latch recess
 - illustrated, 1-18
- documentation
 - spare part numbers, 3-13
- DVD-ROM
 - drive
 - specifications, 6-6

E

- EasyPoint III pointing device
 - cap
 - spare part number, 3-3, 3-9
 - illustrated, 1-17
- electrostatic
 - damage
 - preventing, 4-3
 - discharge
 - typical voltage levels, 4-6
- embedded numeric keypad
 - illustrated, 1-16
- error codes
 - audio test, 2-16
 - CD-ROM test, 2-16
 - Computer Checkup (TEST), 2-11
 - diskette drive test, 2-13
 - hard drive test, 2-14
 - keyboard test, 2-12
 - memory test, 2-12
 - parallel printer test, 2-12
 - pointing device interface test, 2-16
 - processor test, 2-11
 - serial test, 2-13
 - video test, 2-15
- Ethernet RJ-11 jack
 - pinout, 0-1
- expansion connector shield
 - illustrated, 3-2, 3-6

- external diskette drive
 - cable
 - illustrated, 3-12
 - spare part number, 3-12
- illustrated, 3-12
- kit
 - illustrated, 3-10
 - option part number, 3-11
 - spare part number, 3-11
 - spare part number, 3-12
- external monitor
 - troubleshooting, 2-34
- external monitor connector
 - illustrated, 1-15

F

- F1 through F12 function keys
 - illustrated, 1-16
- fan
 - illustrated, 1-12, 3-2
 - removing, 5-38
 - spare part number, 3-4
- fatal error
 - beep codes, 2-6
 - messages, 2-5
- features
 - computer, 1-4
- feet, 5-7
- Fn key
 - illustrated, 1-16

G

- grounding
 - methods, 4-5

H

hard drive, 1-11
5.0-GB
illustrated, 3-2, 3-8, 3-10
spare part number, 3-4, 3-8,
3-11, 3-12
bay
illustrated, 1-12
light
illustrated, 1-17
release latch
illustrated, 1-18
security screw slot
illustrated, 1-18
specifications, 6-3
test error codes, 2-14
tray
illustrated, 3-2, 3-5
troubleshooting, 2-26
hardware installation
troubleshooting, 2-27
headset
illustrated, 3-10
option part number, 3-11
spare part number, 3-11

I

I/O addresses, 6-10
I/O bracket
removing, 5-43
illustrated parts catalog, 3-1
infrared
port
illustrated, 1-15
troubleshooting, 2-28
initialization
default settings, 2-18
INSPECT (View System
Information), 2-17
inverter
removing, 5-27
items that ship with the computer
illustrated, 3-8
spare part numbers, 3-8

J

jacks, 1-14

K

keyboard
assembly
spare part number, 3-3
connector
illustrated, 1-15
pinout, 0-5
connector shield
removing, 5-37
illustrated, 3-2
removing, 5-30
test error codes, 2-12

L

Li-ion
battery pack
illustrated, 3-8, 3-10
Li-ion battery pack, 1-10
logo, 5-6
LS-120 drive
specifications, 6-7

M

mass storage devices, 1-10
illustrated, 3-12
spare part numbers, 3-12
memory
expansion board
128 MB
option part number, 3-11
spare part number, 3-11
16 MB
option part number, 3-11
16-MB
illustrated, 3-10
spare part number, 3-11
32 MB
option part number, 3-11
32-MB
illustrated, 3-10
spare part number, 3-11
64 MB
option part number, 3-11
64-MB

illustrated, 3-10
spare part number, 3-11
illustrated, 3-2
installing, 5-25
removing, 5-25
expansion slot cover
illustrated, 1-18, 3-2, 3-5
map, 6-12
options, 1-9
test error codes, 2-12
messages
fatal error, 2-5
warning, 2-4
microphone
illustrated, 1-12
jack
illustrated, 1-15
pinout, 0-1
miscellaneous
spare part numbers, 3-13
miscellaneous hardware kit
components, 3-6
illustrated, 3-6
spare part number, 3-4, 3-6
miscellaneous plastics kit
components, 3-5
illustrated, 3-5
spare part number, 3-3, 3-5
miscellaneous screws kit
spare part number, 3-13
models
computer, 1-2
modem
board
illustrated, 3-2
spare part number, 3-4
cable
illustrated, 3-8
spare part number, 3-9
chipset specifications, 6-12
removing, 5-41
troubleshooting, 2-29
monitor
connector
pinout, 0-6
troubleshooting, 2-34

- mouse
 - buttons
 - illustrated, 1-17
 - connector
 - illustrated, 1-15
 - pinout, 0-5
- MultiBay
 - illustrated, 1-12
 - light
 - illustrated, 1-17
 - release latch
 - illustrated, 1-18
 - security screw slot
 - illustrated, 1-18
 - weight saver
 - illustrated, 3-8
 - spare part number, 3-9

N

- Num Lk key
 - illustrated, 1-16
- numeric lock light
 - illustrated, 1-17

O

- options, 1-8
 - illustrated, 3-10
 - option part numbers, 3-11
 - spare part numbers, 3-11

P

- packaging
 - precautions, 4-3
- parallel
 - connector
 - illustrated, 1-15
 - pinout, 0-2
 - port
 - test error codes, 2-12
- password
 - clearing, 2-3

- PC Card
 - assembly
 - illustrated, 3-2
 - removing, 5-41
 - spare part number, 3-4
 - eject lever
 - illustrated, 1-13, 3-2, 3-5
 - installing, 5-34
 - removing, 5-33
 - slots
 - illustrated, 1-13
 - troubleshooting, 2-32
- plastic parts
 - handling, 4-1
- pointing device
 - interface test error codes, 2-16
- portable video conferencing kit
 - illustrated, 3-10
 - option part number, 3-11
 - spare part number, 3-11
- ports
 - default settings, 2-18
- POST (Power-On Self-Test), 2-3
- POST error messages, 2-4
- power
 - cord
 - connector
 - illustrated, 1-15
 - illustrated, 3-7, 3-8
 - set requirements, 0-1
 - spare part number, 3-7, 3-9
 - default settings, 2-19
 - equipment
 - illustrated, 3-7
 - spare part numbers, 3-7
 - light
 - illustrated, 1-17
 - supply
 - cables, 5-3
 - removing, 5-36
 - spare part number, 3-4
 - supply assembly
 - illustrated, 3-2
 - switch
 - illustrated, 1-16
 - troubleshooting, 2-33
- Power-On Self-Test (POST), 2-3
- preparing for disassembly
 - computer, 5-3
- processor

- module assembly
 - ground clips, 5-4
 - illustrated, 3-2
 - removing, 5-2
 - screws
 - illustrated, 3-6
 - spare part number, 3-3
 - test error codes, 2-11
- programmable keys
 - illustrated, 1-16

R

- rear cover
 - left
 - illustrated, 3-2, 3-5
 - removing, 5-36
 - right
 - illustrated, 3-2, 3-5
- removal and replacement
 - preliminaries, 4-1
- RJ-11 modem jack
 - illustrated, 1-15

S

- screen
 - troubleshooting, 2-34
- screw
 - matrix, 0-1
- scroll lock light
 - illustrated, 1-17
- security
 - default settings, 2-19
- kit
 - illustrated, 3-8
 - spare part number, 3-9
- slot
 - illustrated, 1-13

serial
connector
 illustrated, 1-15
 pinout, 0-1
port
 test error codes, 2-13
serial number, 0-2
 location, 1-18, 3-1, 5-1
service considerations, 4-1
setup
 computer, 2-7
slipcase
 illustrated, 3-8
 spare part number, 3-9
speaker assemblies
 Armada
 removing, 5-26
specifications, 6-1
 battery pack, 6-8
 CD-ROM
 drive
 20X Max, 6-5
 CD-ROM drive, 6-6
 diskette drive, 6-4
 display, 6-2, 6-4
 DMA, 6-8
 DVD-ROM
 drive, 6-6
 hard drive, 6-3
 I/O addresses, 6-10
 interrupts, 6-9
 LS-120 drive, 6-7
 memory map, 6-12
 modem chipset, 6-12
SpeedPaq Cellular PC Card kit
 illustrated, 3-10
 option part number, 3-11
 spare part number, 3-11

stereo
 line-in
 jack
 pinout, 0-2
 speaker/headphone
 jack
 pinout, 0-2
stereo line-in jack
 illustrated, 1-15
stereo speaker/headphone
 jack
 illustrated, 1-15
stereo speakers
 illustrated, 1-12
SuperDisc LS-120 drive
 illustrated, 3-10, 3-12
 option part number, 3-11
 spare part number, 3-11, 3-12
suspend
 button
 illustrated, 1-16
 light
 illustrated, 1-17
system
 DMA, 6-8
 I/O address, 6-10
 interrupts, 6-9, 6-12
 memory map, 6-12
 memory options, 1-9
system board, 1-19
 illustrated, 3-2
 removing, 5-35
 spare part number, 3-4

T

technician notes, 0-1
telephone
 cable
 illustrated, 3-8
 spare part number, 3-9
TEST (computer checkup), 2-10
tilt feet
 illustrated, 1-12
tool
 required for service, 4-1
transporting
 precautions, 4-3
troubleshooting, 2-1
 audio, 2-21

 battery pack, 2-23
 CD-ROM
 drive, 2-24
 checklist, 2-20
 diskette drive, 2-25
 external monitor, 2-34
 hard drive, 2-26
 hardware installation, 2-27
 infrared, 2-28
 modem, 2-29
 PC Card, 2-32
 power, 2-33
 preliminary steps, 2-2
 screen, 2-34
 universal serial bus, 2-35
 USB, 2-35
 without diagnostics, 2-20
25-pin modem
 connector
 illustrated, 1-13

U

universal serial bus
 troubleshooting, 2-35
USB
 troubleshooting, 2-35
utilities
 Compaq, 2-6

V

vents
 illustrated, 1-16
video
 test error codes, 2-15
View System Information
 (INSPECT), 2-17
volume control
 illustrated, 1-16

W

warning messages, 2-4
workstation
 precautions, 4-4

