

.....

# Contents

## Preface

Symbols.....	xi
Technician Notes .....	xi
Serial Number .....	xii
Locating Additional Information .....	xii

## Chapter 1 Product Description

1.1 Computer Features and Models .....	1-1
Models .....	1-2
Features.....	1-4
Intelligent Manageability.....	1-5
1.2 Computer Components .....	1-8
System Memory Options .....	1-9
Battery Equipment Options .....	1-10
Mass Storage Devices.....	1-10
1.3 Computer External Components.....	1-12
1.4 Design Overview.....	1-19
System Board.....	1-19

## Chapter 2 Troubleshooting

2.1 Preliminary Steps .....	2-2
2.2 Clearing Passwords .....	2-3
2.3 Power-On Self-Test (POST) .....	2-3
2.4 POST Error Messages .....	2-4
2.5 Compaq Utilities .....	2-6
Computer Setup .....	2-7
Computer Checkup (TEST).....	2-10
Running View System Information (INSPECT) .....	2-17
Running Compaq Diagnostics.....	2-18
Boot Sequencing .....	2-18
Factory Default Settings.....	2-18
2.6 Troubleshooting Without Diagnostics .....	2-20
Before Replacing Parts .....	2-20
Checklist for Solving Problems .....	2-20

.....

## *Catalog Chapter 3* **Illustrated Parts**

3.1 Serial Number Location.....	3-1
3.2 Computer System Major Components.....	3-2
3.3 Miscellaneous Plastics Kit Components .....	3-5
3.4 Miscellaneous Hardware Kit Components .....	3-6
3.5 Power Equipment .....	3-7
3.6 Items that Ship with the Computer .....	3-8
3.7 Options.....	3-10
3.8 Mass Storage Devices.....	3-12
3.9 Miscellaneous .....	3-13
3.10 Documentation.....	3-13

## *Chapter 4* **Removal and Replacement Preliminaries Catalog**

4.1 Tools Required .....	4-1
4.2 Service Considerations .....	4-1
Plastic Parts .....	4-1
Cables and Connectors .....	4-2
4.3 Preventing Damage to Removable Drives.....	4-2
4.4 Preventing Electrostatic Damage.....	4-3
Packaging and Transporting Precautions .....	4-3
Workstation Precautions .....	4-4
Grounding Equipment and Methods .....	4-5
Electrostatic Voltage Levels and Protective Materials .....	4-6

## *Chapter 5* **Removal and Replacement Procedures**

5.1 Serial Number.....	5-1
5.2 Disassembly Reference Chart.....	5-2
5.3 Preparing the Computer for Disassembly.....	5-3
Undocking the Computer from the ArmadaStation .....	5-3
Undocking the Computer from the Armada MiniStation.....	5-4
Disconnecting the Computer .....	5-5
5.4 Computer Logo.....	5-6
5.5 Computer Feet .....	5-7
5.6 Battery Packs .....	5-8
Removing a Battery Pack from the Battery Bay .....	5-8
Removing a Battery Pack from the MultiBay .....	5-10
Inserting a Battery Pack into the Battery Bay .....	5-12
Inserting a Battery Pack into the MultiBay .....	5-13

5.7 Hard Drives.....	5-14
Removing a Hard Drive from the Hard Drive Bay.....	5-14
Inserting a Hard Drive into the Hard Drive Bay .....	5-17
Inserting a Hard Drive into the MultiBay.....	5-19
Removing a Hard Drive from the MultiBay.....	5-20
5.8 MultiBay Devices .....	5-22
Removing MultiBay Devices .....	5-22
Inserting MultiBay Devices.....	5-24
5.9 Memory Expansion.....	5-25
Removing the Memory Expansion Slot Cover .....	5-25
Removing a Memory Expansion Board .....	5-27
Inserting a Memory Expansion Board.....	5-28
Replacing the Memory Expansion Slot Cover .....	5-29
5.10 Keyboard Assembly.....	5-30
5.11 Auxiliary Battery .....	5-33
Removing the Auxiliary Battery.....	5-33
Installing the Auxiliary Battery .....	5-34
5.12 Power Supply.....	5-36
5.13 Fan Assembly.....	5-38
5.14 Audio/USB Board.....	5-39
5.15 Modem Board .....	5-41
5.16 Audio Assembly Bracket.....	5-42
5.17 Lithium Disc Cell Battery.....	5-1
5.18 Processor Module Assembly.....	5-2
5.19 Display Assembly and Auxiliary Battery .....	5-5
Removing the Display Assembly .....	5-5
Installing the Display Assembly.....	5-12
Display Bezel.....	5-17
Display Panel.....	5-20
Speaker Assemblies.....	5-26
Inverter.....	5-27
Display Video Cable.....	5-29
Display Audio Cable/Microphone Assembly.....	5-31
5.20 PC Card Eject Levers.....	5-33
Installing the PC Card Eject Levers .....	5-34
5.21 System Board.....	5-35
5.22 PC Card Assembly .....	5-41
5.23 I/O Bracket.....	5-43

## Chapter 6 Specifications

6.1 Physical and Environmental .....	6-1
6.2 Display .....	6-2
6.3 Hard Drive .....	6-3
6.4 Diskette Drive .....	6-4
6.5 CD-ROM Drive.....	6-5

.....

6.6 DVD-ROM Drive .....6-6

6.7 LS-120 Drive .....6-7

6.8 Battery Pack.....6-8

6.9 System DMA .....6-8

6.10 System Interrupts .....6-9

6.11 System I/O Addresses.....6-10

6.12 System Memory Map .....6-12

6.13 Modem Chipset.....6-12

*Appendix A*

**Connector Pin Assignments** .....A-1

*Appendix B*

**Power Cord Set Requirements**

3-Conductor Power Cord Set.....B-1

General Requirements .....B-1

Country-Specific Requirements .....B-2

Notes .....B-2

*Appendix C*

**Screw Listing** .....C-1

**Index**..... I-1

.....

.....